

Speaker Attachment Bracket

Operating Instructions

WS-32SE1B/WS-40SE1B/WS-46SE1B

Thank you for purchasing this unit.

This manual explains important safety instructions to prevent accidents and operating instructions for this unit. **Read this manual carefully and use this unit safely.**

Once you have read this manual, make sure you keep it for future reference.

About This Manual

The instructions in this manual are for model WS-32SE1B/WS-40SE1B/WS-46SE1B. The illustrations used in this manual are of the WS-32SE1B model and they may be different from your model. Any differences in operation are marked in the manual as “WS-32SE1B model only”.

Warning about installing the TV Sound Bar System to the TV stand

This WS-32SE1B/WS-40SE1B/WS-46SE1B speaker attachment bracket is used for SA-32SE1/SA-40SE1/SA-46SE1 TV Sound Bar System and the particular TV models only. Use with other products or for other purposes than those specified may cause damage or injury.

To Customers

Sufficient expertise is required for installing this product. Be sure to pay special attention to safety during the installation. Sony is not liable for any damages or injury caused by mishandling or improper installation, or installing anything other than the specified product. Your statutory rights (if any) are not affected.

On Safety

Products by Sony are designed with safety in mind. If the products are used incorrectly, however, it may result in a serious injury through fire, electric shock, the product toppling over, or the product dropping. Be sure to observe the precautions for safety to prevent such accidents.

WARNING

If the following precautions are not observed, serious injury or death through fire or electric shock, the product toppling over or falling can result.

Do not drop the products or install them where there is a possibility of them falling down.



Prohibited

- Be sure to subcontract installing, moving or dismantling the products to licensed contractors and keep small children away during the procedure.
- Unauthorized installation may result in serious injury or property damage.
- Having an unauthorized dealer carry or dismount the TV Sound Bar System or the TV Sound Bar System-installed TV may lead to the products' falling and result in serious injury or property damage. Make sure that two or more persons carry or dismount the product(s).
- Do not remove screws, etc., after mounting the TV Sound Bar System or the TV Sound Bar System-installed TV.
- Do not handle the products with excessive force during cleaning or maintenance.

Do not place any object on the products.



Prohibited

- Do not put anything on the products. If you do so, the system may fall and cause injury or property damage.

Do not lean or hang on the products.



Prohibited

- Do not lean or hang on the products, as they may fall on you and cause serious injury.

Pay attention to the location.



Prohibited

- Do not expose the products to rain or moisture, or spill liquid of any kind on them. It may cause a fire or electric shock.
- Never place the products in hot, humid or excessively dusty places, or in a place where they are subject to mechanical vibrations. Doing so may cause a fire or electric shock.
- Keep flammable objects or open flames (e.g., candles) away from the products.
- Do not install the products over or under an air conditioner. If the products are exposed to wind from the air conditioner for an extended period of time, or get wet by water leakage from the air conditioner, this may cause a fire, an electric shock, or malfunctions.

Do not allow the cords to be pinched.



Prohibited

- If the AC power cord (mains lead) or connecting cords are pinched between the products and the wall, floor, or other object, or bent or twisted by force, the internal conductors may become exposed and cause a short circuit or an electrical break. This may cause a fire or an electric shock.
- Do not step on the AC power cord (mains lead) or connecting cords when you carry the products. The cord may be damaged, and this may result in a fire or electric shock.

Do not cover the ventilation holes of the products.



Danger

- If you cover the ventilation holes (with a cloth, etc.), heat may build up inside and cause a fire.

Do not stumble over the cords.



Danger

- You may trip, or may cause the products to topple over and cause injury.

ATTENTION

If the following precautions are not observed, injury or property damage may occur.

Do not install any equipment other than the specified product.

- The WS-32SE1B/WS-40SE1B/WS-46SE1B speaker attachment bracket is designed for use with the specified equipment only. If you install equipment other than that specified, it may fall or break, and cause injury.
- Do not modify the products.
- Do not place anything hot directly on the products. The heat may cause discoloration or deformation of the products.

Be sure to secure the TV Sound Bar System and TV.

- Secure the TV Sound Bar System and TV firmly when installing them together. Then, secure the TV Sound Bar System-installed TV firmly on the stand. If the TV Sound Bar System and TV are not installed securely, they may fall or topple over, and cause injury.

Do not apply weight to the products or subject them to any kind of impact.

- When installing the TV Sound Bar System to a TV stand, do not apply weight to the TV Sound Bar System or TV with your hand. Do not hit the TV Sound Bar System or TV with hard objects, such as a screwdriver, etc.

When moving the TV Sound Bar System-installed TV.



If you move the products forcefully, damage or injury may result. Be sure to follow the proper procedures and advice given below.

- Be sure that two or more persons carry the TV Sound Bar System-installed TV, and only after unplugging and removing the connected equipment.
- Be careful not to allow your hands or feet to be pinched under the bottom of the TV Sound Bar System-installed TV.
- Do not drag the TV Sound Bar System-installed TV. The base part may come off and damage the floor.
- When carrying the TV Sound Bar System-installed TV, do not hold it by the TV Sound Bar System. Doing so may cause damage or injury.

Notes on installation

- When assembling, spread a cloth on the floor to avoid damaging the floor.
- Install the products on a solid and flat floor.
- Be sure that two or more persons install the products. Doing it alone may result in an accident or injury.
- Be sure to keep children away during the process.

Be sure to install the products securely following the instructions.

- Tighten the screws securely. If the TV Sound Bar System is not installed securely, it may fall and cause damage or injury.
- Be careful not to pinch your fingers or hands when assembling the products.

Notes on cleaning

Clean with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as thinner, benzine or alcohol.

If you have any questions or problems concerning this product, please consult your nearest Sony dealer.

Table of Contents

Unpacking 5

Setting Up 6

 Installing the TV Sound Bar System
 on the TV stand 6

 
 Preventing the TV from toppling over... 11

 Adjusting the angle of the TV..... 13


Specifications 14

Unpacking


- Operating Instructions (this manual)
- Compatible list (1)
- Attachment bracket (A)
 - 32 A (For WS-32SE1B) (1)




- 40/46 A (For WS-40SE1B/WS-46SE1B) (1)

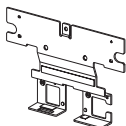

- 40/46 B (For WS-40SE1B/WS-46SE1B) (1)

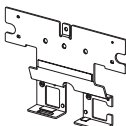

- Extension neck for TV stand (B) (1)

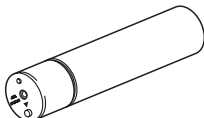

- Screw for attachment bracket (+PSW M5 × 12 mm) (C) (2)



- Screw for attachment bracket (Silver) (D) (2)



- Screw for TV stand head (+PSW M5 × 20 mm) (E) (3)



- Cable clamp (F) (2)



- Support belt (G) (1)



- Screw for support belt (+PSW M4 × 10 mm) (H) (1)



- Wood screw for support belt (M3.8 × 20 mm) (I) (1)




- Anchor bolt (J) (2)



Setting Up

You can use this speaker attachment bracket to install the TV Sound Bar System on the TV stand.

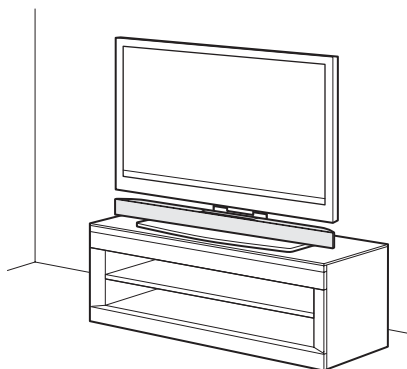


Notes


- This speaker attachment bracket is designed for use with the stand supplied with TV only.
- This speaker attachment bracket cannot be used with the SU-FL71M/SU-FL71L floor stand.
- If you want to hang the SA-32SE1/SA-40SE1/SA-46SE1 TV Sound Bar System, hang it directly on the wall.

Installing the TV Sound Bar System on the TV stand


- 1** Remove the screws from the TV stand, then detach the TV from the TV stand.

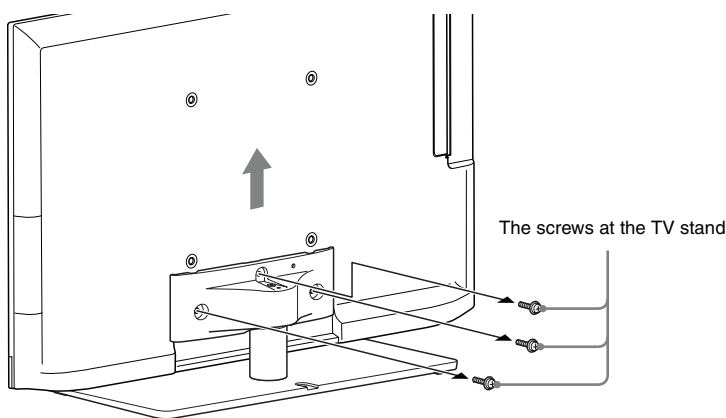


- 2** Remove the screws from the original neck, then detach the original neck from the TV stand.

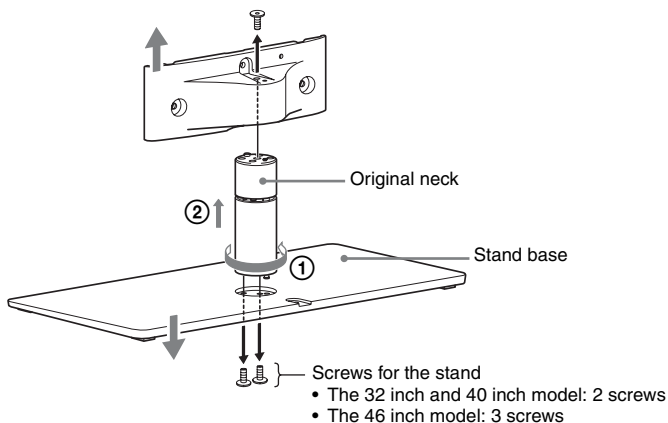

- 3** Install the extension neck for TV stand (B) to the TV stand using the screws removed in step 2.

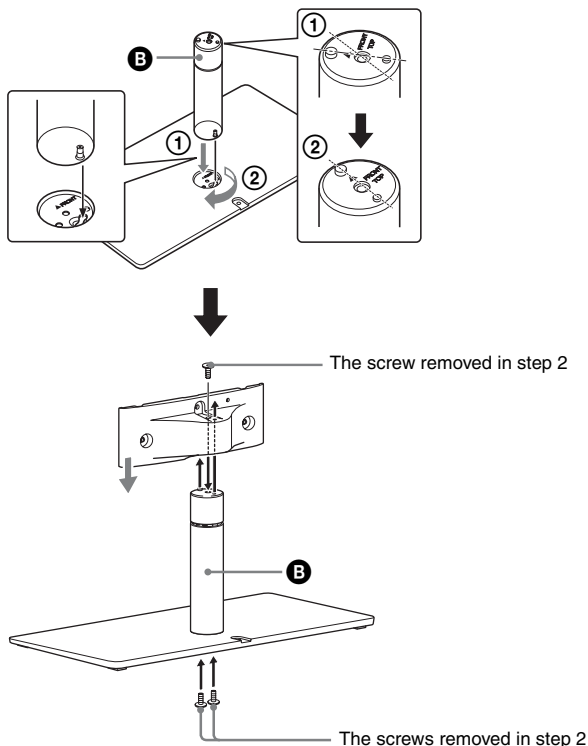


- 4** Remove the screw on the rear cover of the TV Sound Bar System, then remove the rear cover.

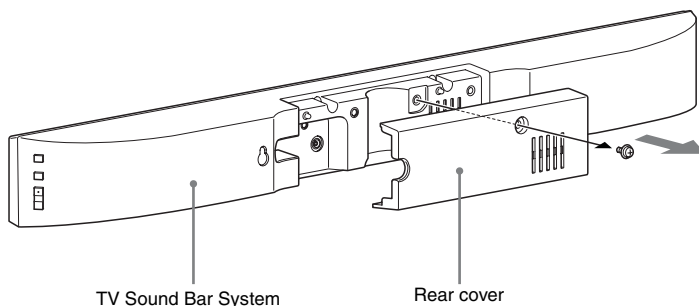


- 5** Mount the attachment bracket (A) to the TV Sound Bar System with the screw for attachment bracket (+PSW M5 × 12 mm) (C).

Check the engraving on the rear of the attachment bracket and use a suitable bracket for the TV. For details, refer to the supplied “Compatible list”.

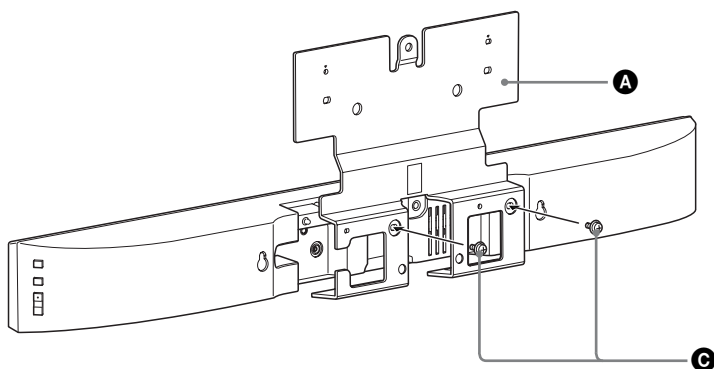


6 Remove the screws from the rear of the TV.

Be sure to place the TV on a soft thick cloth with the TV screen facing down to prevent damaging the surface of the LCD.

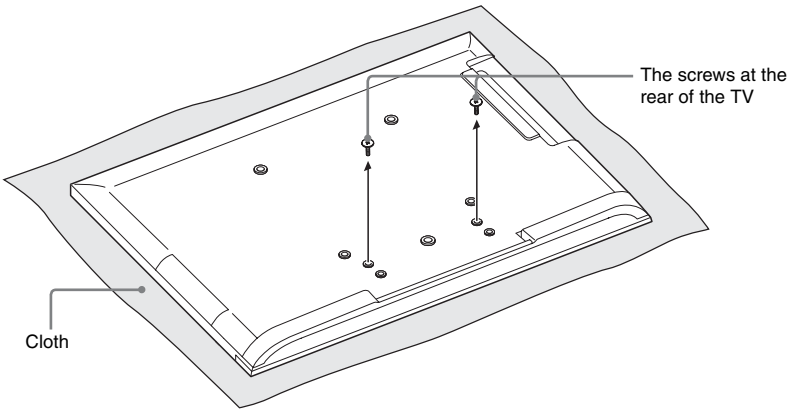

7 Mount the TV Sound Bar System to the TV with the screw for attachment bracket (Silver) (D).

Be sure to fasten the screws to the screw holes pointed with ▼ mark.

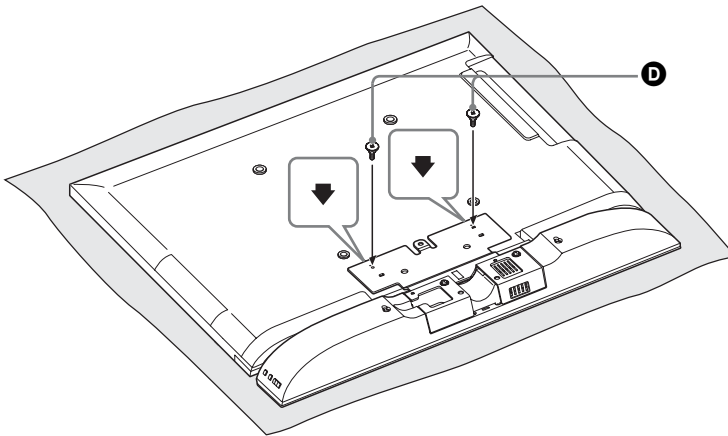


Notes

- After installation, the screw for attachment bracket (Silver) will protrude from the screw hole. This is not a malfunction.
- When carrying the TV Sound Bar System-installed TV, do not hold it by the TV Sound Bar System. Doing so may cause damage or injury.

8 Attach the TV to the TV stand.


Match the screw protrusion to the notch on the TV stand.

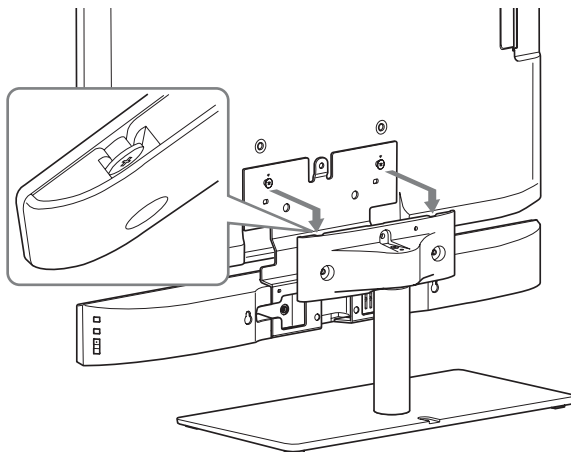

Note

When attaching the TV to the TV stand, make sure to hold the TV instead of the TV Sound Bar System.

9 Secure the TV to the TV stand with the screw for TV stand head (+PSW M5 × 20 mm) (E).

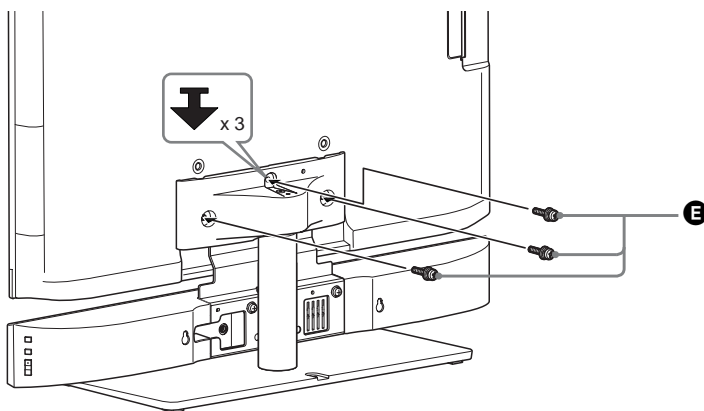

10 After you have made all connections, you can use the cable clamp (E) to neatly secure the cables.

Note

As a protective measure, secure the TV. For details, see “Preventing the TV from toppling over”.

Preventing the TV from toppling over

As a protective measure, secure the TV. If you fail to do so, the TV may topple over resulting in serious injury.


Warning

To avoid injury, place the TV Sound Bar System-installed TV less than 25 cm from the wall, and firmly secure the TV to the wall.

Notes

- Be careful not to pinch your fingers when setting up the TV or rack.
- Install the TV after allowing for a space of less than 25 cm from the wall. The wall will prevent the TV from falling even if the TV leans backward towards the wall.

When installing the TV on a rack

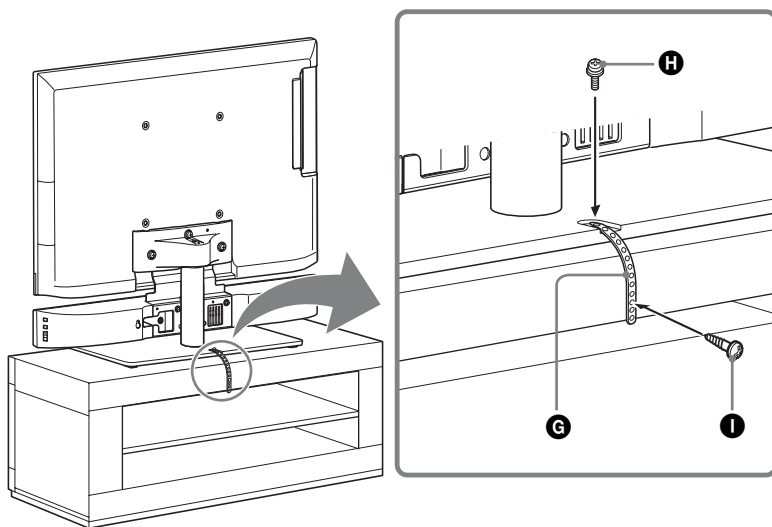


- 1 Place the TV on the center of the rack.
- 2 Fit the support belt (G) to the TV stand, then firmly fasten with the screw for support belt (+PSW M4 × 10 mm) (H) using a screw driver.
- 3 Fasten the support belt to the rack with the wood screw for support belt (M3.8 × 20 mm) (I).


Securing the TV to a wall

Prepare a strong string or chain (not supplied) and a fastener (not supplied) for fastening to the wall. Secure the fastener to a reinforced wall. Even if you have secured the TV to the rack, be sure to secure it to a wall by following this procedure.


1 Remove the screws from the rear of the TV.

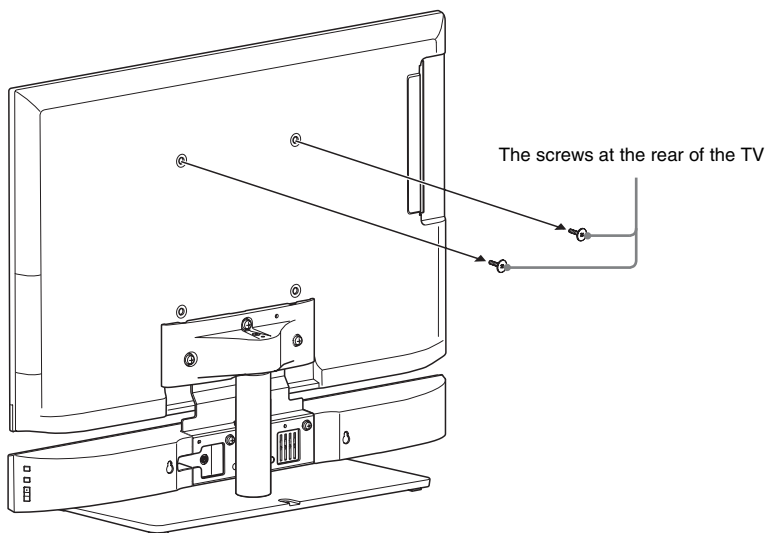


2 Fasten the anchor bolt (J) to the rear of the TV.

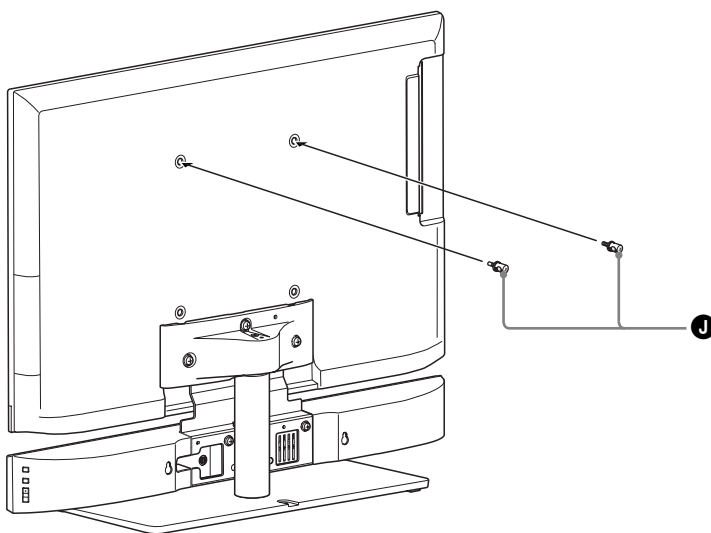

- 3** Secure the fastener to the reinforced wall (①), and then thread the string or chain through the holes of the anchor bolt and the fastener (②). Firmly tie both ends of the string or chain together.

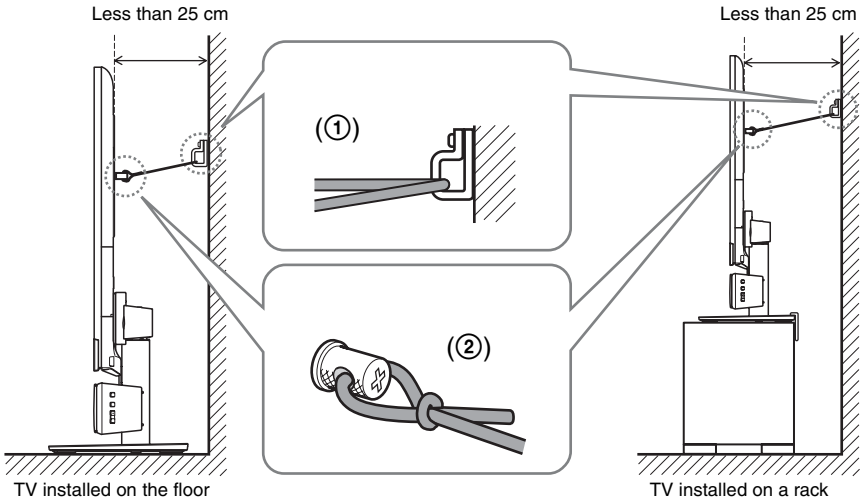

Adjusting the angle of the TV

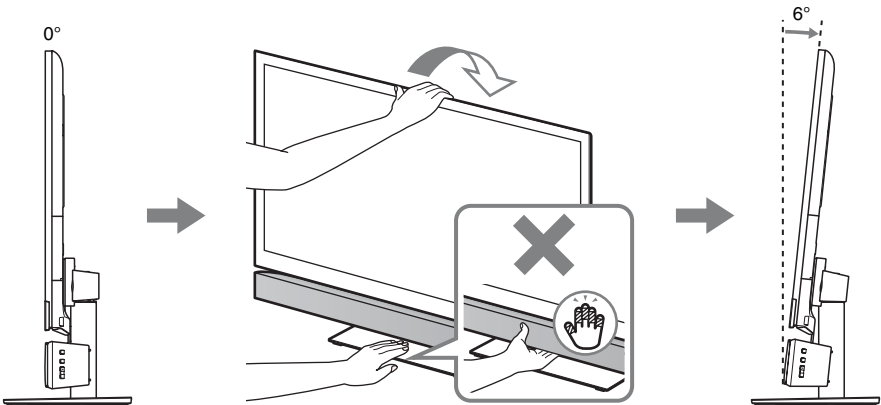

Specifications

Attachment bracket 32 A

Dimensions (w/h/d) (approx.)

250 mm × 216 mm ×
35 mm

Mass (approx.) 1.1 kg

Attachment bracket 40/46 A

Dimensions (w/h/d) (approx.)

334 mm × 227 mm ×
35 mm

Mass (approx.) 1.3 kg

Attachment bracket 40/46 B

Dimensions (w/h/d) (approx.)

332 mm × 232 mm ×
35 mm

Mass (approx.) 1.3 kg

Extension neck for TV stand

Dimensions (approx.)

φ 43 mm × 216.8 mm

Mass (approx.) 0.66 kg

Design and specifications are subject to change without notice.

See the following website for a FAQ and solutions.

<http://www.sony.co.jp/support>

Sony service for operation the products	
Toll free	0120-333-020
From Mobile phone, PHS, and some IP phone	0466-31-2511
Sony service for repairing	
Toll free	0120-222-330
From Mobile phone, PHS, and some IP phone	0466-31-2531
* Contact to this Sony service for consulting to purchase the Operating Instructions, Remote, etc.	



After connecting to the number shown left, press **“306”** and **“#”** during the first announcement is hearing. Then, it is connected to the Sony customer service.

Fax (for both service): 0120-333-389

Sony Corporation 1-7-1, Konan, Minato-ku, Tokyo, 108-0075, Japan



* 4 2 6 9 3 7 3 E 1 * (1)